


2: Foundation and Ceiling Loops

Install the Foundation per the instructions with the kit. Keep the Tapewire flap on the inside. Stick the tapewire to the inside of the Foundation. If you are wiring after assembly, cut a slot across the top of the Foundation with an Oscillating Multitool or similar device.

Oscillating Multitool



Run the Ceiling Loops from one side of the Main Loop to the other. Pay careful attention to the direction you are installing the tapewire to ensure the blue will overlap the blue lead of the Main Loop, and the copper will overlap the copper lead. Leave at least 1 1/2" overlap

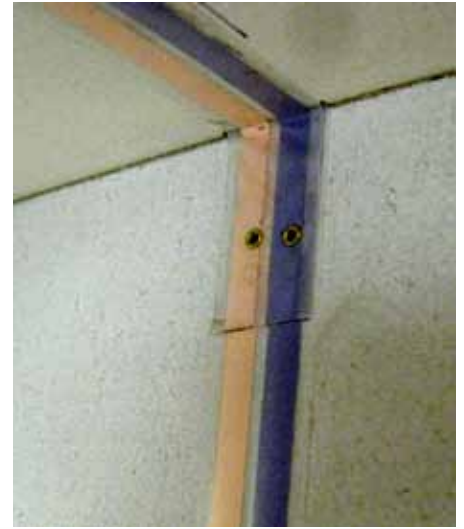

Copper-to-copper and blue-to-blue

