


Step 3: Base Loops

Install Attic Partitions and Dividers

Run Base Loops $\frac{3}{4}$ " above the floors (Mark with the layout stick from the Electrification Kit). Each Base Loop is in one piece and will eyelet the Main Loop on one side and the Ceiling Loop on the other side. Use "Folded Corners" to go around the door (no eyelets in folded corners!). To make a "Folded Corner", fold the tapewire away from the direction you are trying to go, then fold over the pleat in the new direction.

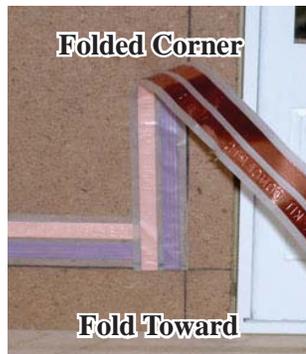

The simple sponce run¹ is the traditional style of connecting tapewire runs, eyeleted on one end. For more robust wiring, hook each run into the wiring on both ends² (copper-to-copper and blue-to-blue!)

