


Kit #6804 Parts Measurements are approximate and are for identification purposes only

<http://www.hd-imagination-house.com/Accessories.html>

- 10 Window Trim [ $\frac{3}{8}$  Fluted]  $3\frac{1}{16}$  angled ends
- 10 Window Trim [ $\frac{3}{8}$  Fluted]  $5\frac{9}{16}$  angled ends
- 1 Door Left Trim [ $\frac{3}{8}$  Fluted]  $7\frac{11}{16}$  angled end
- 1 Door Right Trim [ $\frac{3}{8}$  Fluted]  $7\frac{11}{16}$  angled end
- 1 Door Top Trim [ $\frac{3}{8}$  Fluted]  $3\frac{7}{16}$  angled ends

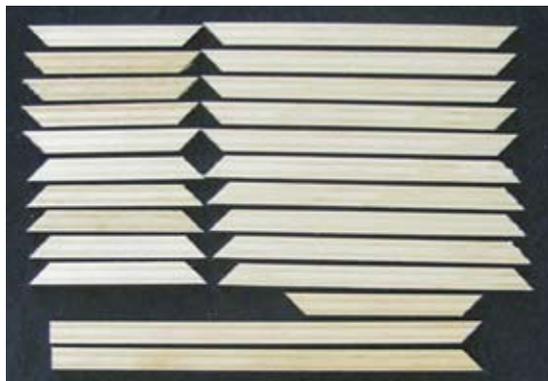

If staining, do it before gluing the pieces together; paint or varnish after gluing.

Glue together the Door Interior Trim set and five Window Interior Sets. Make sure they are square at the corners.

Let the glue dry.

Complete the interior finishing (paint, wallpaper, flooring, etc).

Install the Door and Window Trim

